 


THORN



 
DUA10B Distribution Unit Automatic Control

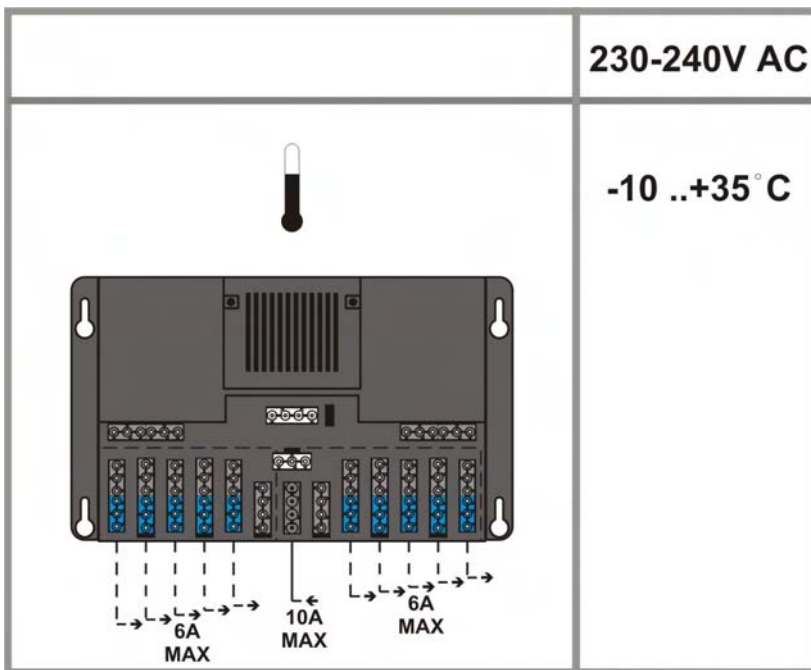

96233048

[CZ] Montážní návod
[DE] Montageanleitung
[DK] Monteringsvejledning
[EE] Paigaldusjuhend
[FI] Asennusohje
[FR] Notice de montage
[HU] Szerelési útmutató
[IT] Istruzioni di montaggio



[LT] Montavimo Instrukcijos
[LV] Instalācijas instrukcija
[NO] Monteringsanvisning
[PL] Instrukcja montażu
[RU] Инструкция по монтажу
[SE] Installationsanvisning
[UK] Installation Instructions

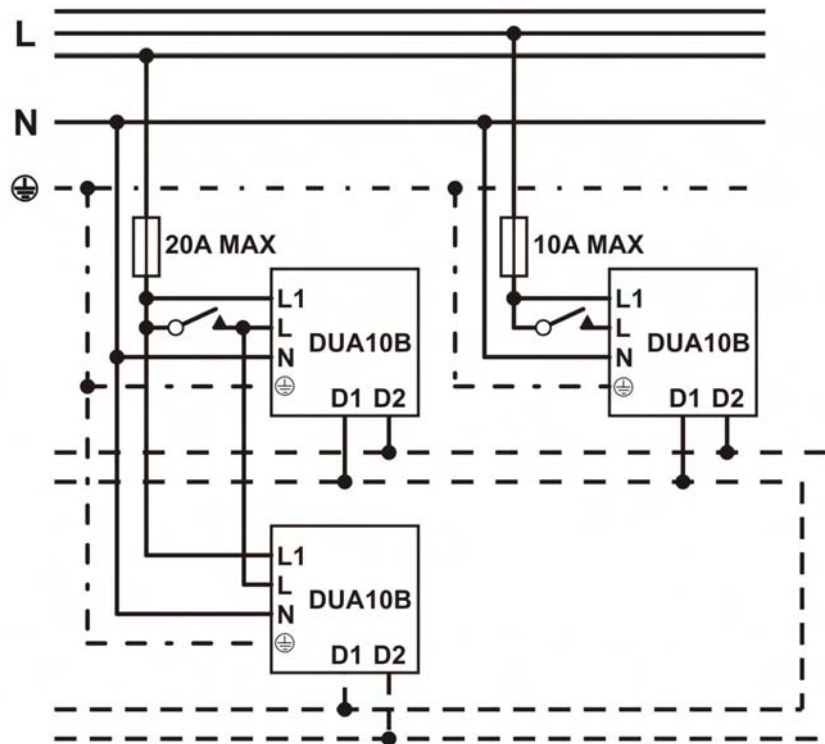

1 x 10  MAX



(1 x 8 DSI  MAX SensaDigital/SensaLink)

  2 x 5  MAX

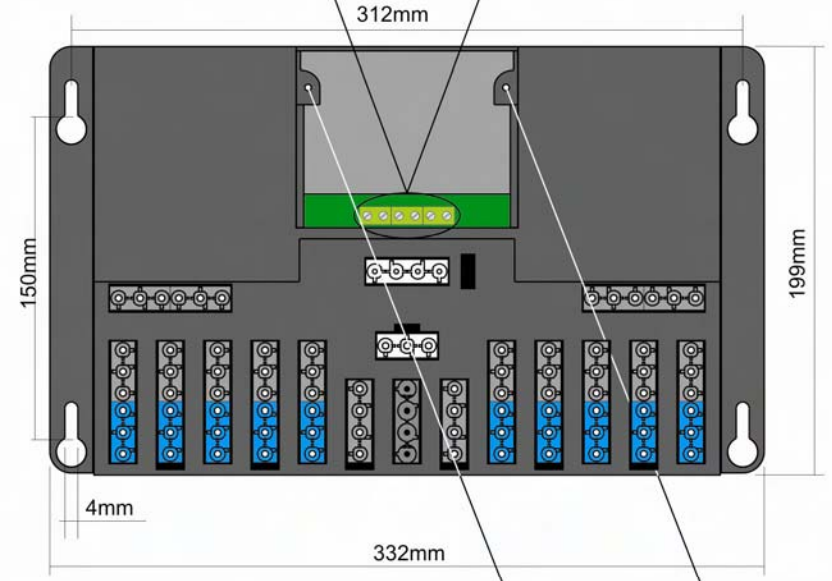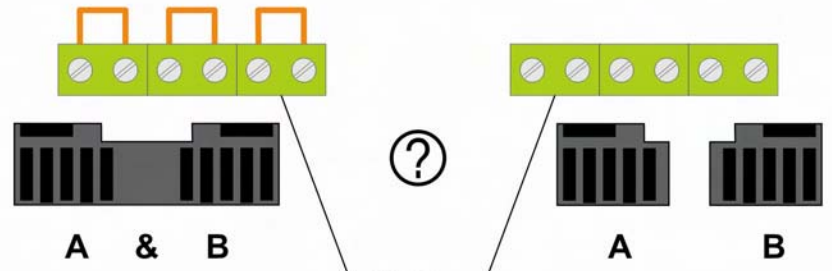


x2

  
1

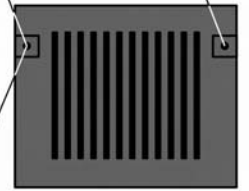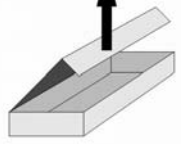


 SensaModular/SensaAdvanced/ControliteDIM/Basic

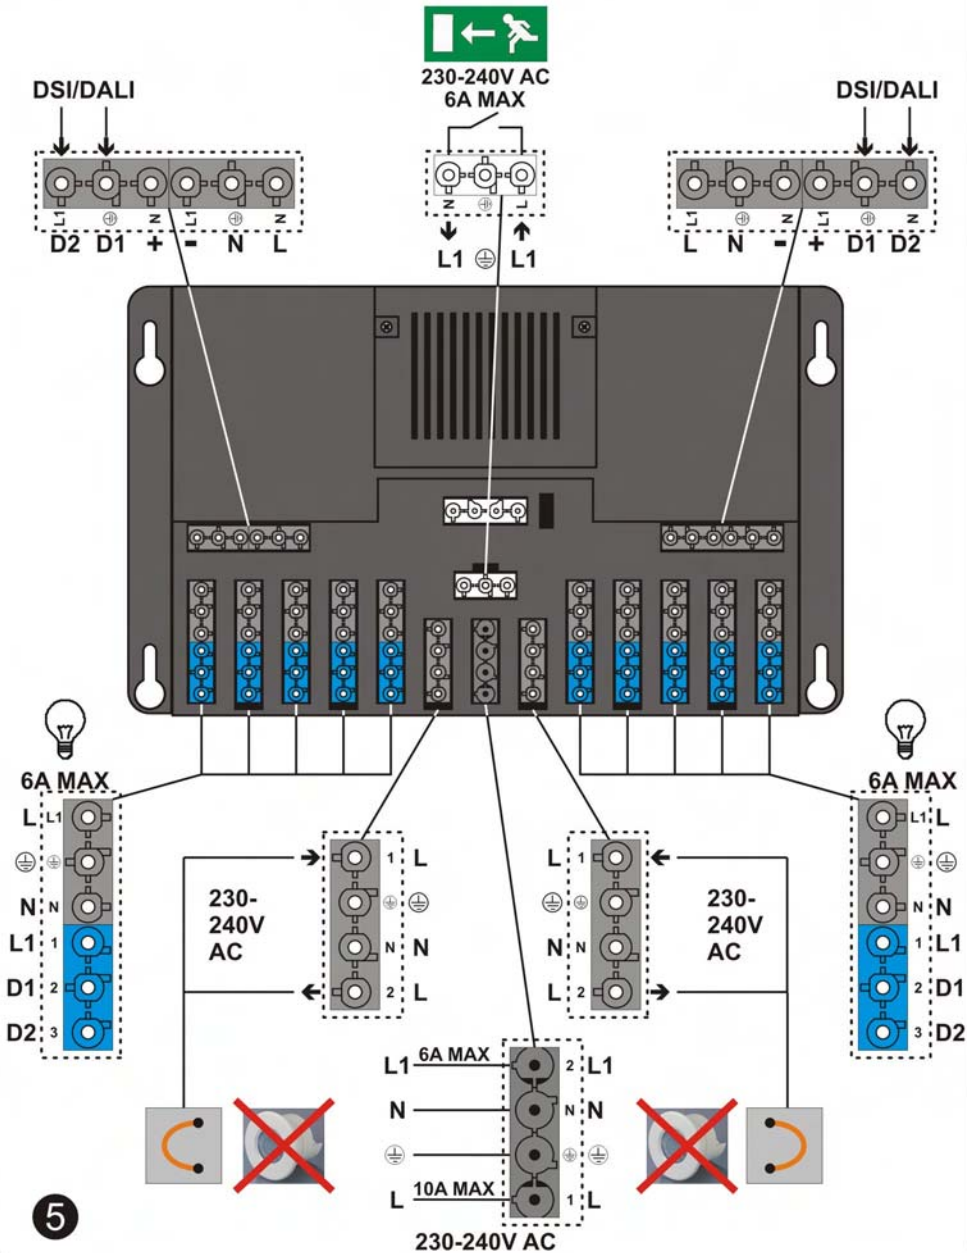

SwitchDIM

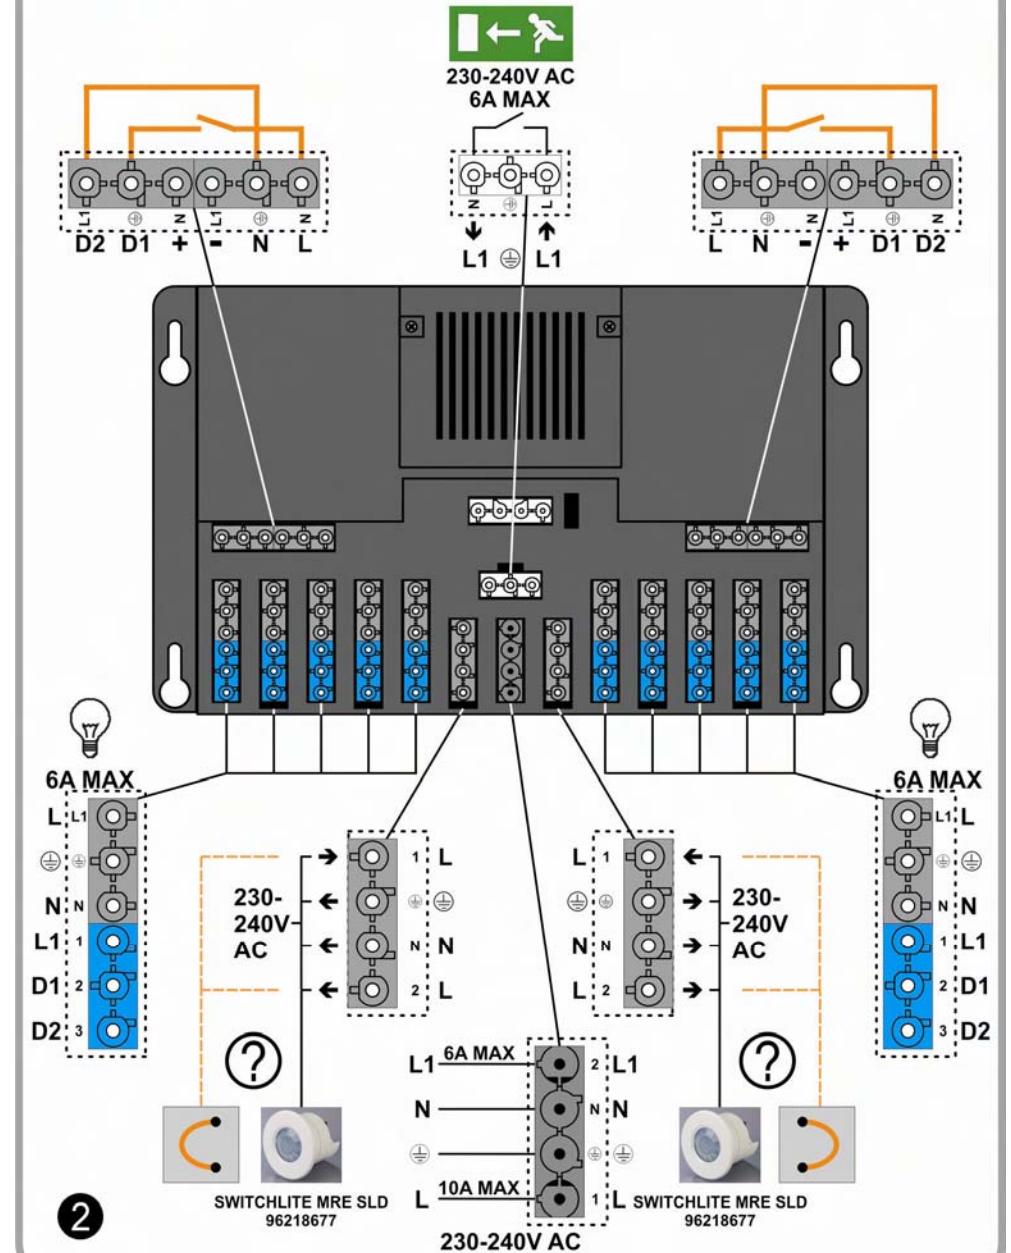 

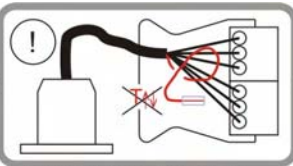 

SensaLink

 
 
 
 
 
 
 
 
 
 
 
 
e.g. SENSALINK MRE SENLDDSI 96102982

SensaLink Bus
SENSALINK SENLPSLT 96232304
SENSALINK SENLPSG 96232305




230-240V AC
6A MAX

e.g. SENSALINK MRE SENLDDSI 96102982

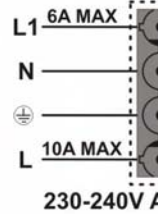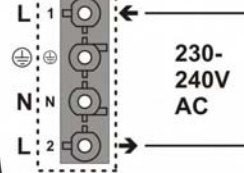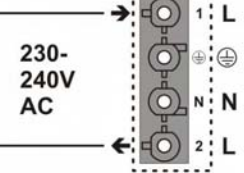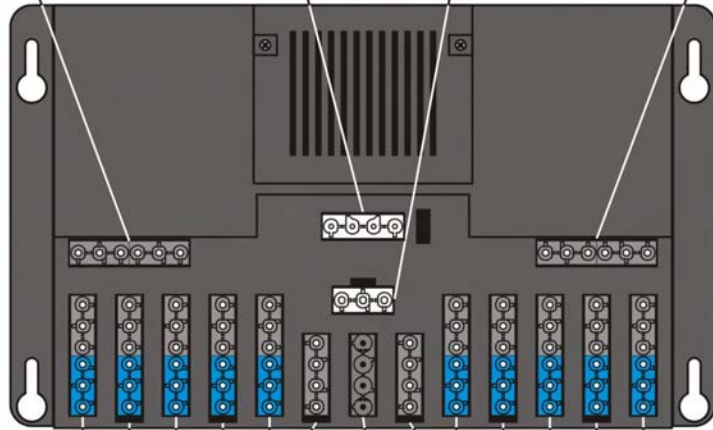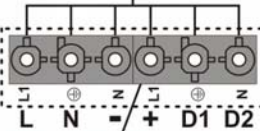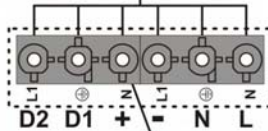

3

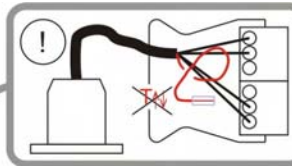 












SensaDigital

e.g. SENSE MRE SEND DSI 96211279



230-240V AC
6A MAX

           e.g. SENSE MRE SEND DSI 96211279

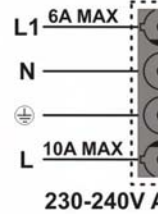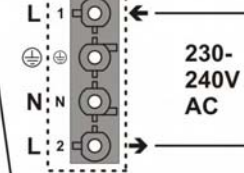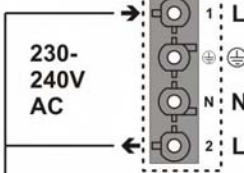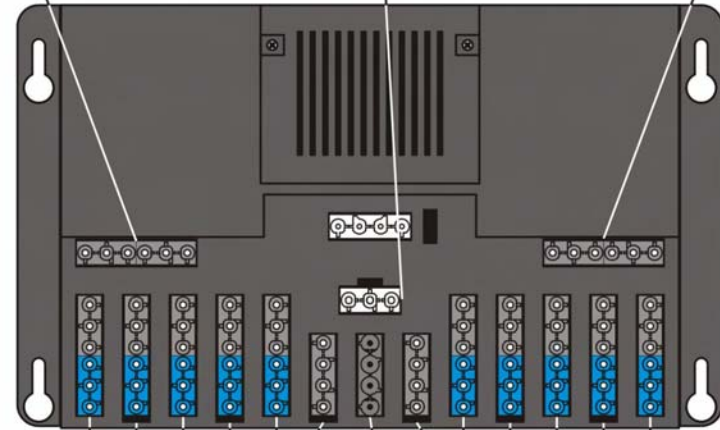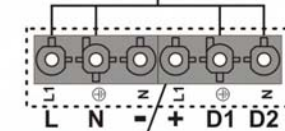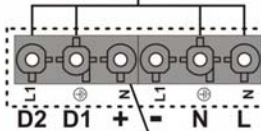

4